

Thermal Trend Lean DB for the Pocket PC installation is broken down into three different steps. Step one is the Program installation. Step two is setting the storage location of your database on the Pocket PC. Step three is the registration and activation of your software.


Instructions:

Before starting the Installation on the Pocket PC, connect the Pocket PC to the computer that you will be installing from. *Note: you must have Microsoft Active Sync installed prior to starting the Thermal Trend – Lean DB installation, if you have not installed Active Sync please refer to the Pocket PC setup instructions from the Manufacturer of your Pocket PC on how to install and setup Active Sync.*


Insert installation CD into your computer CD ROM.

STEP 1:


- A. View the CD and double click on the folder marked PPC to view its contents.

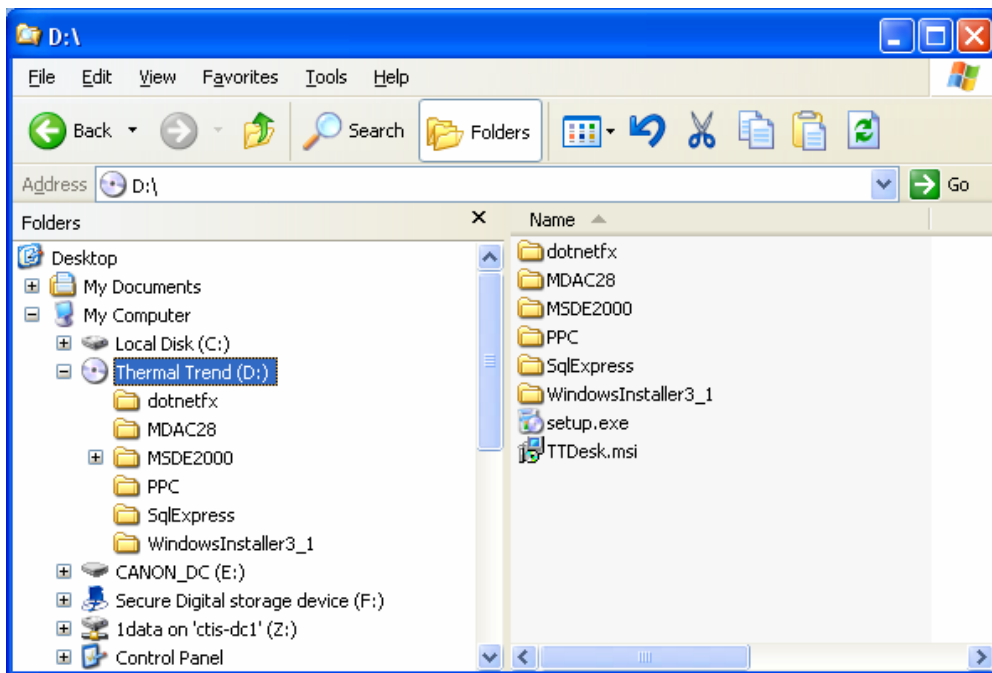

- B.** Install Thermal Trend on the PPC by double clicking on “setup.exe” file in the PPC folder.

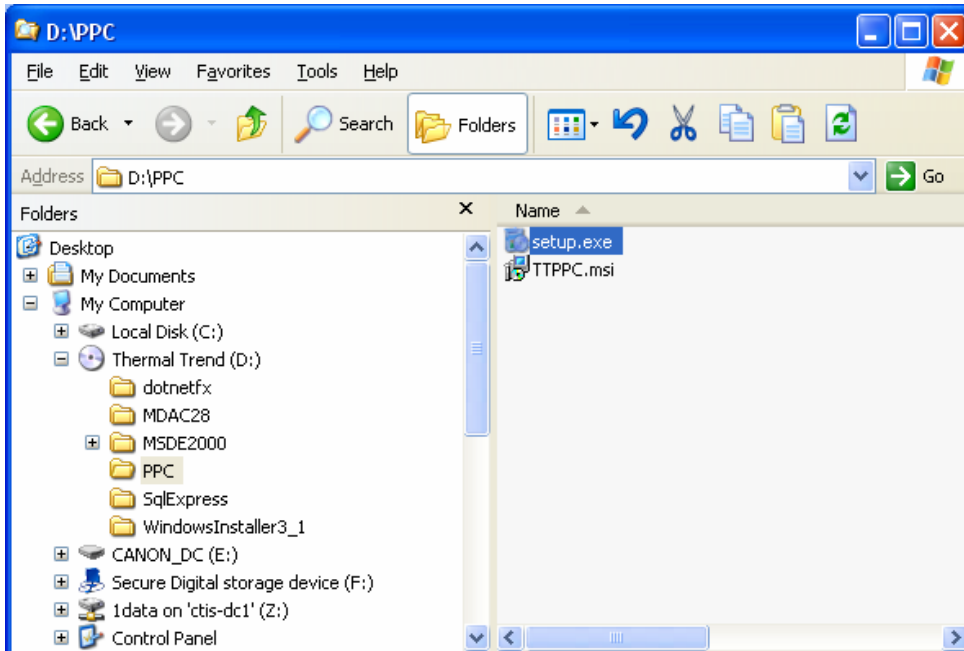

- C.** This will start the ThermalTrend Lean for the PPC Setup Wizard, click Next to continue the installation.

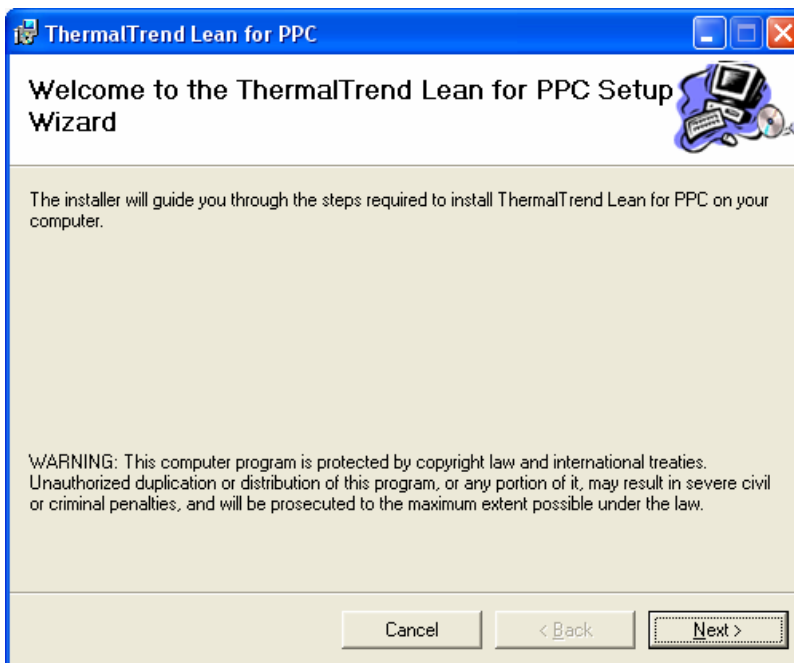





Thermal Trend

Infrared PdM Inspection Management System

- D. Click Next to continue with the installation of the Thermal Trend Lean DB (you can change the install folder or the users access to the Thermal Trend PPC Deployment Tool for the desktop computer installing from)

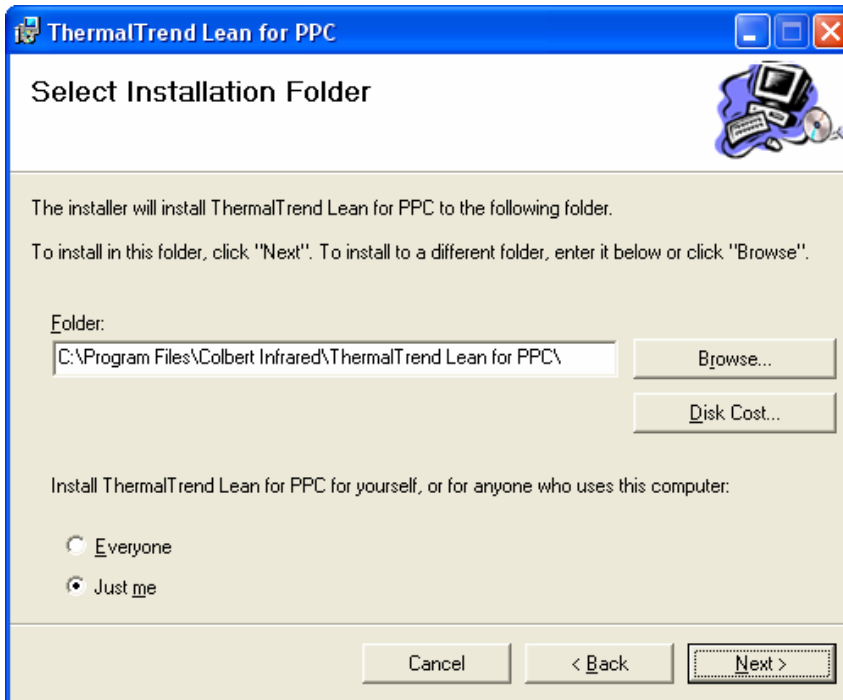

- E. Confirm the Installation by clicking the Next button.

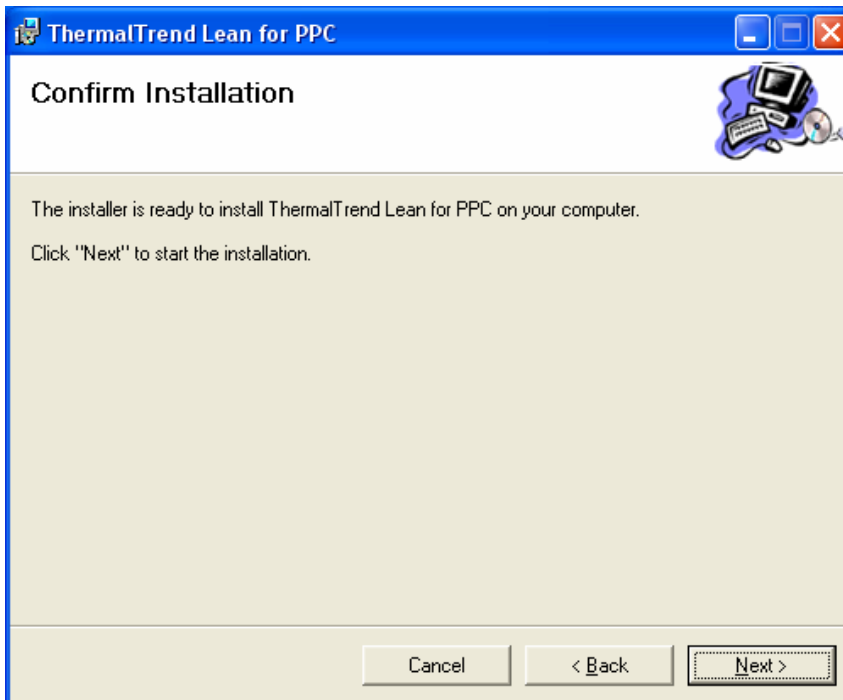





Thermal Trend

Infrared PdM Inspection Management System

- F. This will start the Installation of the Thermal Trend Lean PPC Deployment tool on the desktop computer.

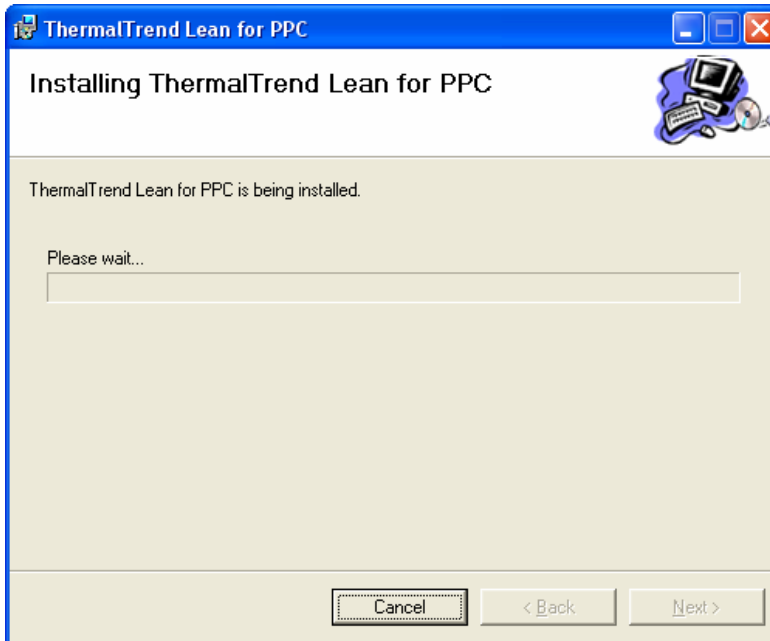


- G. After the successful installation on the computer the Thermal Trend Lean PPC Deployment Tool start and check the Active Sync connection and look at the Pocket PC components to be installed.

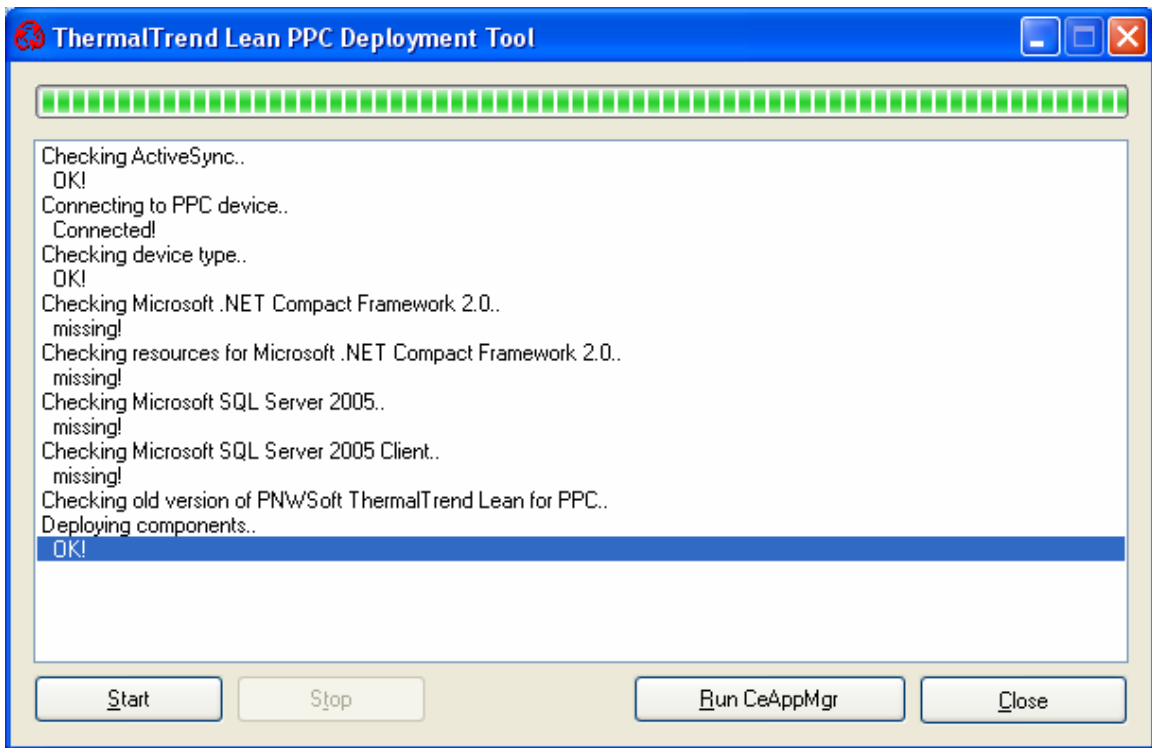




- H. The Deployment Tool will automatically start the CeAppMgr (Add/Remove Programs) for the Pocket PC

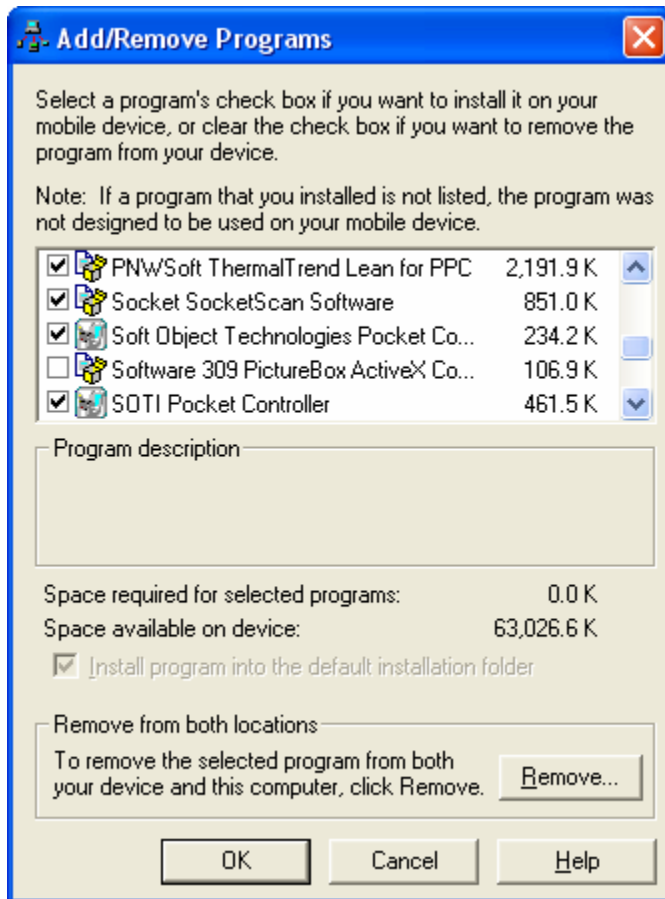

- I. Click Yes to install Thermal Trend Lean DB on the pocket PC in the default program directory.



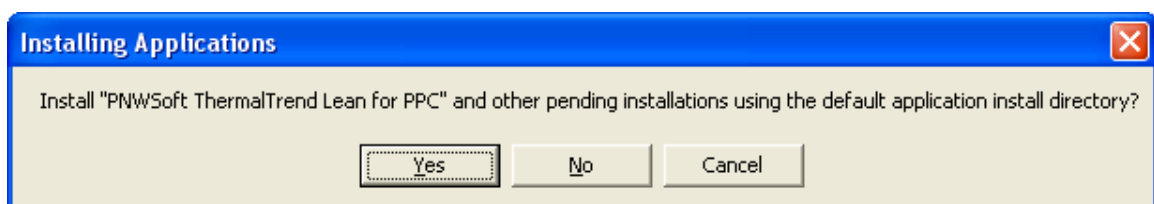





Thermal Trend

Infrared PdM Inspection Management System

- J. The program will start the installation of the required programs on the Pocket PC.

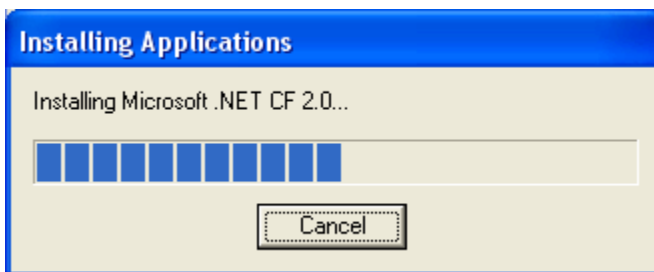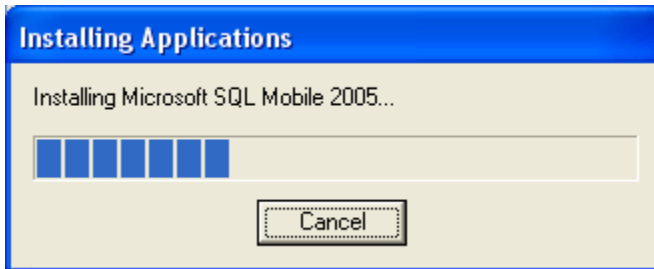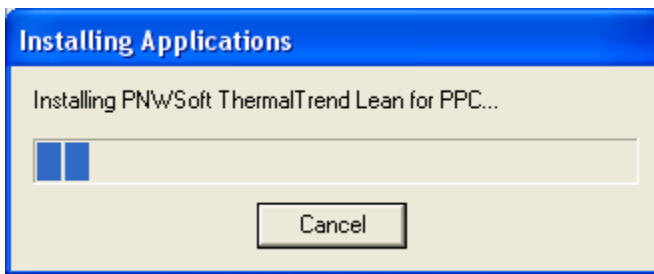

- K. After installing the required programs you will need to check your Pocket PC screen for any additional steps.

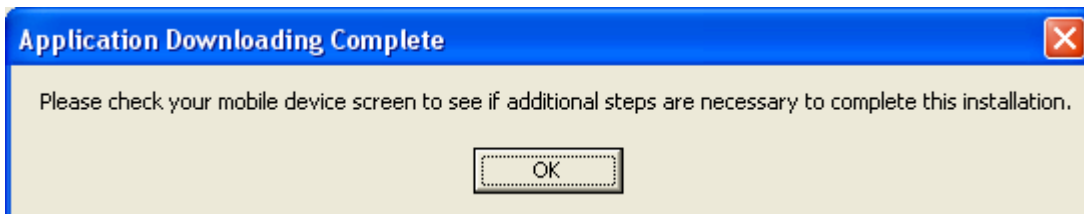




Thermal Trend

Infrared PdM Inspection Management System

- L. When installing on Windows Mobile 5.0 or higher you will receive the following message, click Yes on the Pocket PC to continue the installation process.

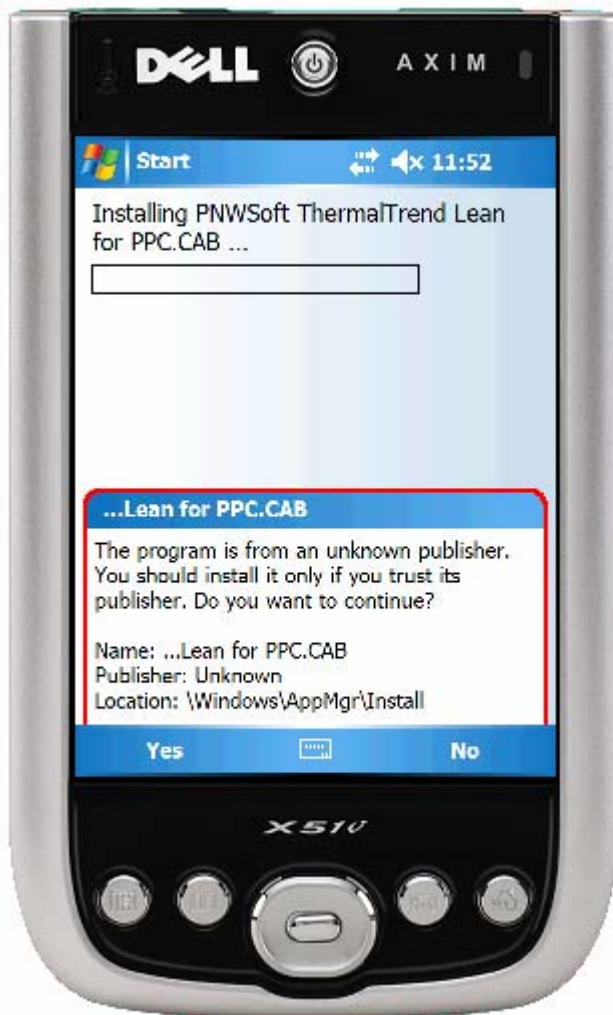




Thermal Trend

Infrared PdM Inspection Management System

- M.** Choose the location on the device to install Thermal Trend, it is advised to install to the Device. *Note: if you install the program to an SD Card or a Compact flash card if that card is removed from the Pocket PC the program will not run, also some Pocket PC power management of these external memory cards can cause Thermal Trend Lean DB to error on the Pocket PC and not run Properly.*

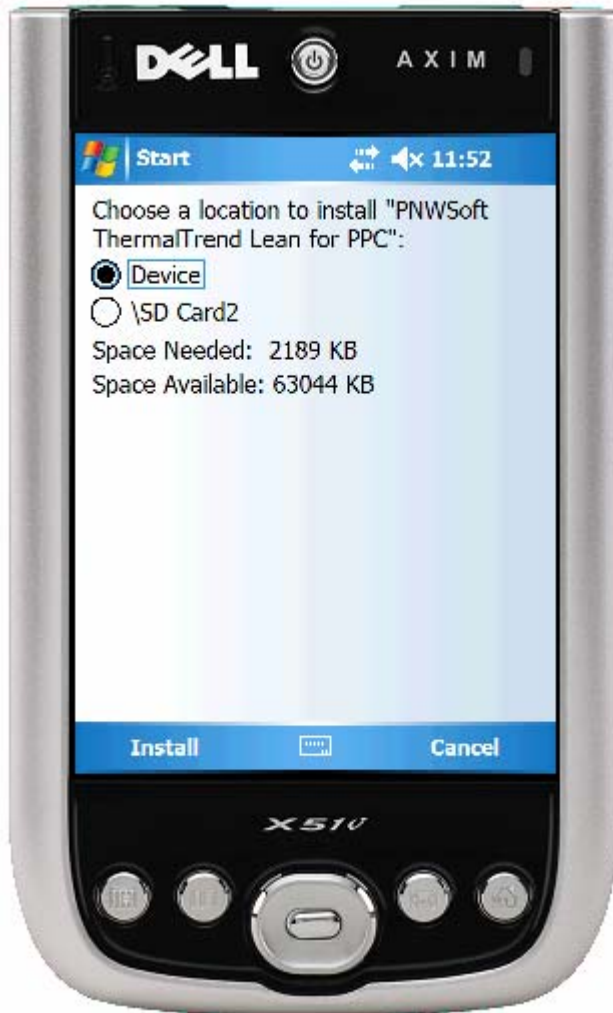




Thermal Trend

Infrared PdM Inspection Management System

- N. After the Thermal Trend Lean DB was installed successfully on the Mobile Device click the ok button in the upper right of the screen.

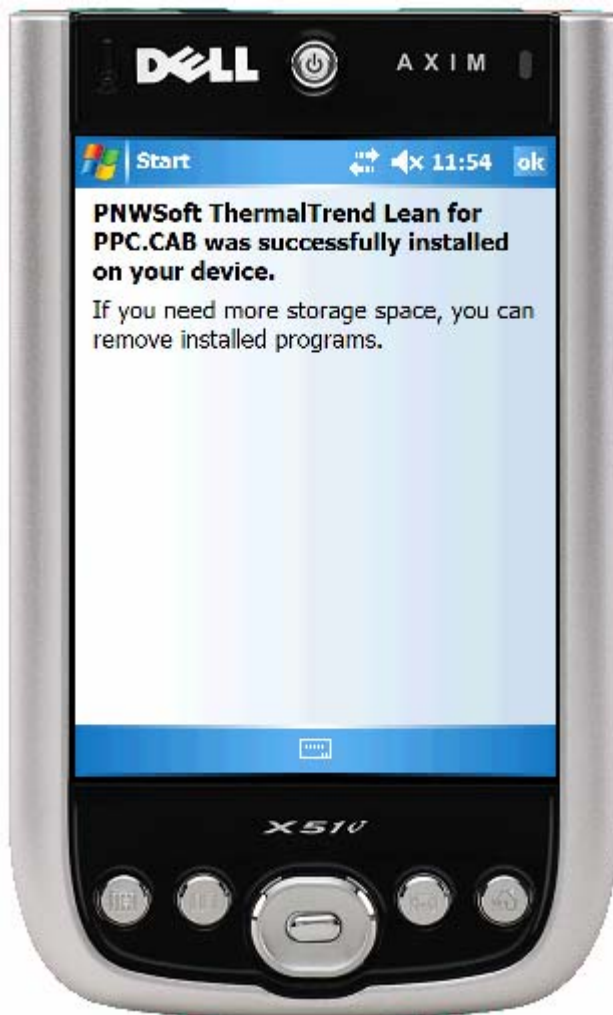



Thermal Trend

Infrared PdM Inspection Management System


STEP 2:

- A. Start the Thermal Trend Lean DB program on the Pocket PC by going to the start all programs then, click on the ThermalTrend Lean program icon.





- B.** You will be asked where you would like to store your Thermal Trend Lean DB database on the Pocket PC, it is suggested that you use your internal memory as storage location for the database. *Note: if set the storage of your database to an SD Card or a Compact flash card if that card is removed from the Pocket PC your database will not be located and a new one will be created. Also some Pocket PC power management of these external memory cards can cause Thermal Trend Lean DB to error on the Pocket PC and not run Properly if the database is stored to a memory card.*

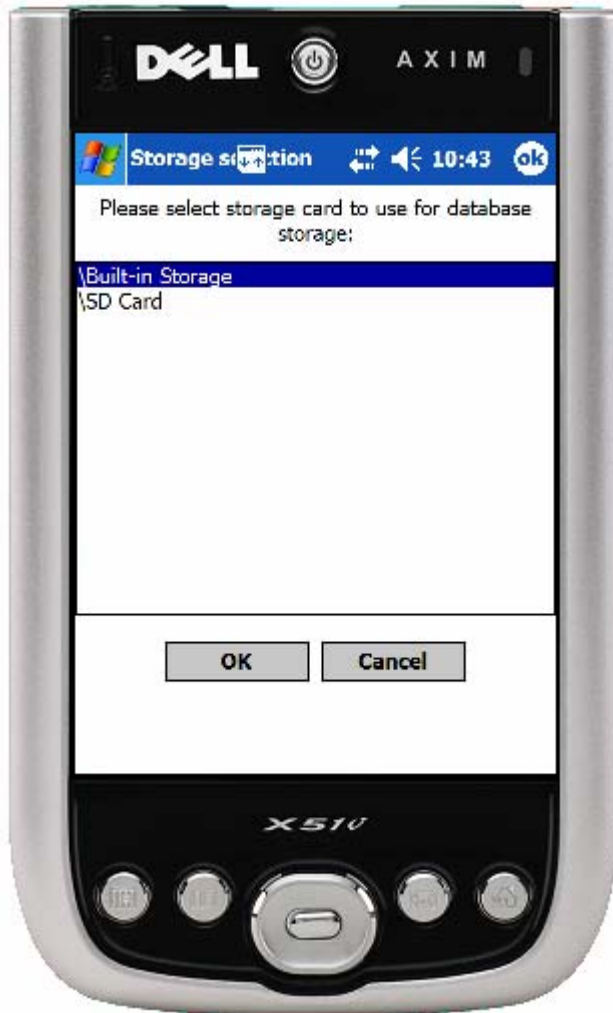




Thermal Trend

Infrared PdM Inspection Management System

STEP 3:

- A. To register/active your copy of Thermal Trend Lean DB for the Pocket PC contact the Professional Thermographers Association. *Note: Web activation will be implemented in the summer of 2007.*

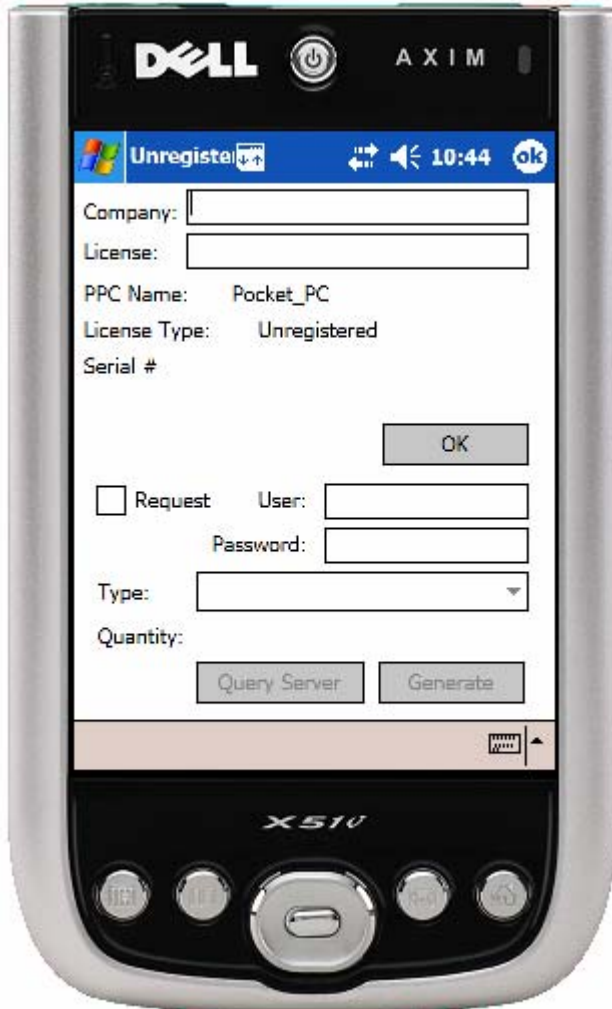



Thermal Trend

Infrared PdM Inspection Management System

- B. Putting in the Company information and License number received from the Professional Thermographers Association you should see the "Registration is successful" dialog, click ok and you are now ready to start using the program on your Pocket PC.

